

 
	COLOR KEY	
RED	POSITIVE/Common	
BLACK	GROUND/RETURN	
GREEN	INPUT	
BLUE	OUTPUT	
LT. BLUE	CAN-BUS/J-1939	

PROPRIETARY DATA OF LOR MANUFACTURING COMPANY, INC. IT IS NOT TO BE DISCUSSED OR USED FOR ANY PURPOSE OR CONVEYED TO OTHERS WITHOUT THE SPECIFIC AUTHORIZATION OF LOR MANUFACTURING COMPANY, INC.

ALL GROUNDS MUST GO TO BATTERY GROUND
ALL POSITIVES MUST GO TO BATTERY POSITIVE

2 SOCKET CONNECTOR - OK TO ELEVATE SPEED		
#	DESCRIPTION	TERMINATION/CONNECTION POINT
1	SWITCH INPUT RETURN	TO 12 SOCKET CONNECTOR C - #6
2	SWITCH INPUT RETURN	TO 70 SOCKET - #46
PK	SWITCH INPUT RETURN	PIN JUMPER - POSITION #1 TO POSITION #2

OK TO ELEVATE
START



2 SOCKET CONNECTOR - DROP TO IDLE		
#	DESCRIPTION	TERMINATION/CONNECTION POINT
1	SWITCH INPUT RETURN	TO 12 SOCKET CONNECTOR C - #6
2	SWITCH INPUT RETURN	TO 70 SOCKET - #47
PK	SWITCH INPUT RETURN	PIN JUMPER - POSITION #1 TO POSITION #2

DROP TO IDLE




FUEL PUMP PRIME - 6 POSITION TYCO		
#	DESCRIPTION	TERMINATION/CONNECTION POINT
1	FUEL PUMP PRIME - N/O	TO 12 SOCKET B CONNECTOR - #7
3	FUEL PUMP PRIME - GROUND	TO GROUND BATTERY CABLE SPLICE
4	FUEL PUMP PRIME - COIL (-)	TO 12 SOCKET B CONNECTOR - #3

FUEL PUMP
PRIME



70 SOCKET CONNECTOR		
#	DESCRIPTION	TERMINATION/CONNECTION POINT
3	ANALOG SENSOR RETURN	TO 2 POSITION TYCO (AIR TEMP) - #2
4	DIGITAL SENSOR POWER (+5V)	TO 3 SOCKET (COOLANT LEVEL SENSOR) - A
11	AUTO ETHER AID	TO 2 SOCKET (AUTO ETHER) - #1
17	AIR TEMP	TO 2 POSITION TYCO (AIR TEMP) - #1
18	SWITCH INPUT RETURN	TO 12 SOCKET C CONNECTOR - #6
26	WAIT TO DISCONNECT LAMP (+)	TO 2 SOCKET (WAIT TO DISCONNECT) - #1
27	BATTERY (-) - GROUND	TO GROUND BATTERY CABLE SPLICE
32	BATTERY (-) - GROUND	TO GROUND BATTERY CABLE SPLICE
33	CONSTANT VOLTAGE CEM	TO 12 SOCKET C CONNECTOR - #4
36	BATTERY (-) - GROUND	TO GROUND BATTERY CABLE SPLICE
37	FUEL RELAY - COIL (+)	TO 12 SOCKET D CONNECTOR - #3
38	FUEL RELAY - (GROUND)	TO 12 SOCKET D CONNECTOR - #4
39	FUEL RELAY - N/O	TO 12 SOCKET D CONNECTOR - #1
42	J1939 DATA LINK SHIELD	TO J1939 SPLICE - SHIELD
50	J1939 DATA LINK (+)	TO J1939 SPLICE - YELLOW
51	J1939 DATA LINK (-)	TO J1939 SPLICE - GREEN
44	REMOTE SHUTDOWN SWITCH	TO 12 SOCKET D CONNECTOR - #5
46	SWITCH INPUT RETURN	TO 2 SOCKET (OTES) - #2
47	SWITCH INPUT RETURN	TO 2 SOCKET (DTI) - #2
48	BATTERY (+) - CONSTANT VOLTAGE	TO 12 SOCKET C CONNECTOR - #1
49	COOLANT LEVEL SENSOR	TO 3 SOCKET (COOLANT LEVEL SENSOR) - C
51	WAIT TO DISCONNECT LAMP (-)	TO 2 SOCKET (WAIT TO DISCONNECT) - #2
52	BATTERY (+) - CONSTANT VOLTAGE	TO 12 SOCKET C CONNECTOR - #2
53	BATTERY (+) - CONSTANT VOLTAGE	TO 12 SOCKET C CONNECTOR - #2
55	BATTERY (+) - CONSTANT VOLTAGE	TO 12 SOCKET C CONNECTOR - #3
57	CEM	TO 12 SOCKET C CONNECTOR - #7
61	BATTERY (-) - GROUND	TO GROUND BATTERY CABLE SPLICE
63	BATTERY (-) - GROUND	TO GROUND BATTERY CABLE SPLICE
65	BATTERY (-) - GROUND	TO GROUND BATTERY CABLE SPLICE
67	BATTERY (-) - GROUND	TO GROUND BATTERY CABLE SPLICE
69	DEF TANK SUPPLY	TO 12 SOCKET B CONNECTOR - #11
70	SWITCHED VOLTAGE	TO 12 SOCKET B CONNECTOR - #1
	SWITCHED VOLTAGE	TO DATA LINK B PIN - A

70 SOCKET
ECM

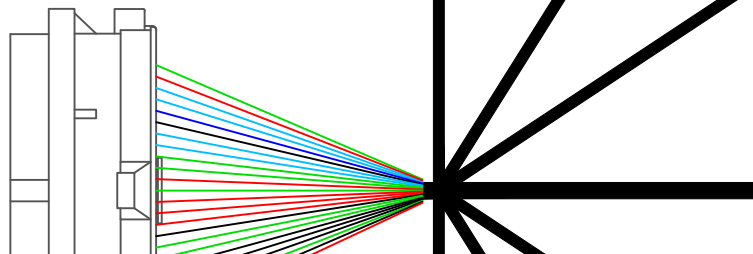

2 SOCKET CONNECTOR - AUTO ETHER AID		
#	DESCRIPTION	TERMINATION/CONNECTION POINT
1	AUTO ETHER AID	TO 70 SOCKET CONNECTOR - #11
2	AUTO ETHER AID	TO 12 SOCKET C CONNECTOR - #6

AUTO ETHER
AID



AIR TEMP - 2 POSITION TYCO CONNECTOR		
#	DESCRIPTION	TERMINATION/CONNECTION POINT
1	AIR TEMP	TO 70 SOCKET CONNECTOR - #17
2	AIR TEMP RETURN	TO 70 SOCKET CONNECTOR - #3

AIR TEMP



2 SOCKET (BLK) - WAIT TO DISCONNECT LAMP		
#	DESCRIPTION	TERMINATION/CONNECTION POINT
1	WAIT TO DISCONNECT LAMP (+)	TO 70 SOCKET CONNECTOR - #26
2	WAIT TO DISCONNECT LAMP (-)	TO 70 SOCKET CONNECTOR - #51

WAIT TO
DISCONNECT



TERMINAL [1] - START SOLENOID		
#	DESCRIPTION	TERMINATION/CONNECTION POINT
1	STARTER 1 - N/O	TO 12 SOCKET D CONNECTOR - #11
11	STARTER 1 - N/O	TO 12 SOCKET D CONNECTOR - #12


START
SOLENOID



COOLANT
LEVEL
SENSOR

3 SOCKET CONNECTOR - COOLANT LEVEL SENSOR		
#	DESCRIPTION	TERMINATION/CONNECTION POINT
A	ANALOG SENSOR POWER (+5V)	TO 70 SOCKET CONNECTOR - #4
B	SENSOR RETURN	TO 12 SOCKET C CONNECTOR - #6
C	COOLANT LEVEL SENSOR	TO 70 SOCKET CONNECTOR - #49

TO POWER
DISTRIBUTION
MODULE

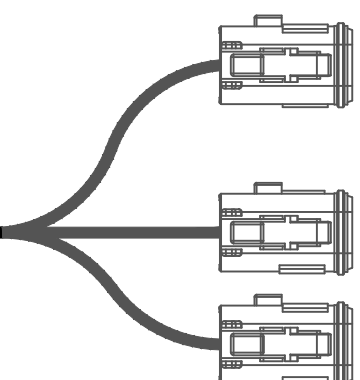

12 SOCKET - CUSTOMER CONNECTOR		
#	DESCRIPTION	
1	REMOTE ENGINE SHUTDOWN	
2	ECM SWITCH RETURN	
3	START SOLENOID	
4	EXTERNAL ALARM RELAY OUTPUT	
5	CAT DATA LINK HIGH	
6	CAT DATA LINK LOW	
7	J1939 CAN HIGH	
8	J1939 CAN LOW	
9	CAN SHIELD	
10	KEYSWITCH INPUT	
11	CONSTANT VOLTAGE SUPPLY	
12	GROUND	


12 SOCKET 'C' KEY CONNECTOR (GREEN) - POWER		
#	DESCRIPTION	TERMINATION/CONNECTION POINT
1	CONSTANT VOLTAGE	TO 70 SOCKET CONNECTOR - #48
2	CONSTANT VOLTAGE	TO 70 SOCKET CONNECTOR - #52
3	CONSTANT VOLTAGE	TO 70 SOCKET CONNECTOR - #53
4	CONSTANT VOLTAGE	TO 70 SOCKET CONNECTOR - #55
4	CONSTANT VOLTAGE CEM	TO 70 SOCKET CONNECTOR - #58
6	SWITCH INPUT RETURN	TO 70 SOCKET CONNECTOR - #19
6	SWITCH INPUT RETURN	TO 2 SOCKET (OTES) - #1
6	SWITCH INPUT RETURN	TO 2 SOCKET (DTI) - #1
6	AUTO ETHER AID INPUT RETURN	TO 2 SOCKET AUTO ETHER AID - #2
7	SENSOR RETURN	TO 3 SOCKET (COOLANT LEVEL SENSOR) - B
7	CEM	TO 70 SOCKET CONNECTOR - #57
8	BATTERY (-)	TO GROUND BATTERY CABLE SPLICE
9	BATTERY (+)	TO 6 GA. BATTERY (+) SPLICE
10	BATTERY (+)	TO 6 GA. BATTERY (+) SPLICE
11	BATTERY (+)	TO 6 GA. BATTERY (+) SPLICE
12	BATTERY (+)	TO 6 GA. BATTERY (+) SPLICE

12 SOCKET 'D' KEY CONNECTOR (BROWN) - ENGINE		
#	DESCRIPTION	TERMINATION/CONNECTION POINT
1	FUEL RELAY - N/O	TO 70 SOCKET CONNECTOR - #39
3	FUEL RELAY - COIL (+)	TO 70 SOCKET CONNECTOR - #37
4	FUEL RELAY - GROUND	TO 70 SOCKET CONNECTOR - #38
5	REMOTE SHUTDOWN SWITCH	TO 70 SOCKET CONNECTOR - #44
6	CAN LOW	TO J1939 SPLICE - GREEN
7	CAN HIGH	TO J1939 SPLICE - YELLOW
8	J1939 SHIELD	TO J1939 SPLICE - SHIELD
11	STARTER 1 - N/O	TO TERMINAL 1 - #10 RING TERMINAL
12	STARTER 1 - N/O	TO TERMINAL 1 - #10 RING TERMINAL

12 SOCKET 'B' KEY CONNECTOR (BLACK) - ENGINE		
#	DESCRIPTION	TERMINATION/CONNECTION POINT
1	IGNITION SWITCHED BATTERY INPUT	TO 70 SOCKET CONNECTOR - #70
3	FUEL PUMP PRIME - COIL (-)	TO FUEL PUMP PRIME 6 POSITION TYCO - #4
7	FUEL PUMP PRIME - N/O	TO FUEL PUMP PRIME 6 POSITION TYCO - #1
11	DEF TANK SUPPLY	TO 70 SOCKET CONNECTOR - #69

DATA LINK CONNECTOR - 9 PIN		
#	DESCRIPTION	TERMINATION/CONNECTION POINT
A	SWITCHED VOLTAGE	TO 70 SOCKET CONNECTOR - #70
B	GROUND	TO GROUND BATTERY CABLE SPLICE
C	J1939 SHIELD	TO J1939 SPLICE - SHIELD
G	J1939 (+)	TO J1939 SPLICE - YELLOW
F	J1939 (-)	TO J1939 SPLICE - GREEN

C9.3B 12V POWER
DISTRIBUTION
MODULE

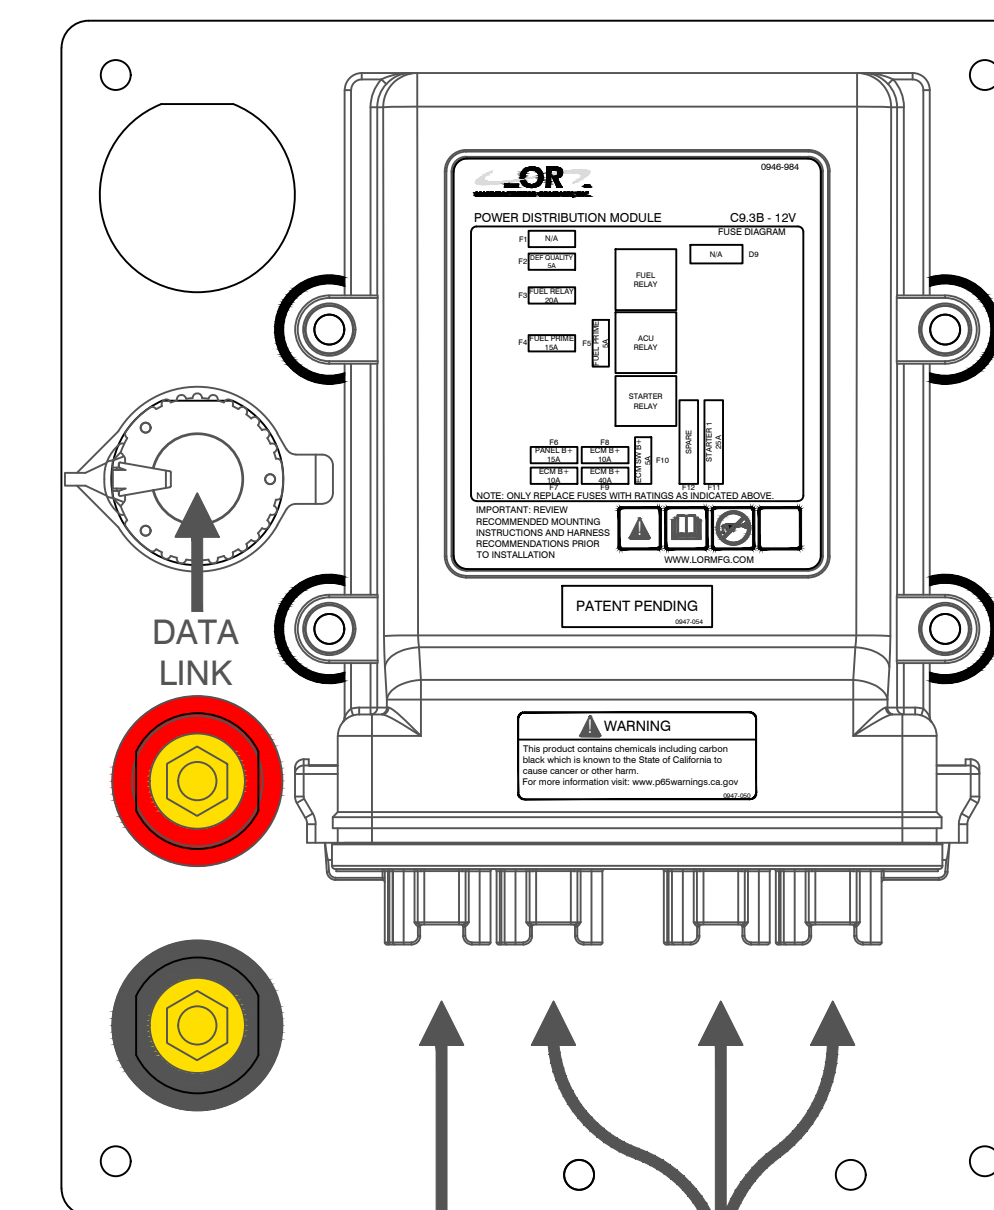

CUSTOMER HARNESS
CONNECTOR CONNECTORS