



P/N: 7341

DRAWN BY: B. DELORENZO

DATE: 06-04-2020

REVISED BY:

DATE:

DESCRIPTION: POWER DISTRIBUTION KIT FOR C7.1
12V LRC

NOTES:

COLOR KEY

RED

BLACK

GREEN

BLUE

LT. BLUE

POSITIVE

GROUND




INPUT

OUTPUT

CAN-BUS/J-1939

PROPRIETARY DATA OF LOR MANUFACTURING COMPANY, INC. IT IS NOT TO BE DISCUSSED OR USED FOR ANY PURPOSE OR CONVEYED TO OTHERS WITHOUT THE SPECIFIC AUTHORIZATION OF LOR MANUFACTURING COMPANY, INC.


ALL GROUNDS MUST GO TO BATTERY GROUND
ALL POSITIVES MUST GO TO BATTERY POSITIVE

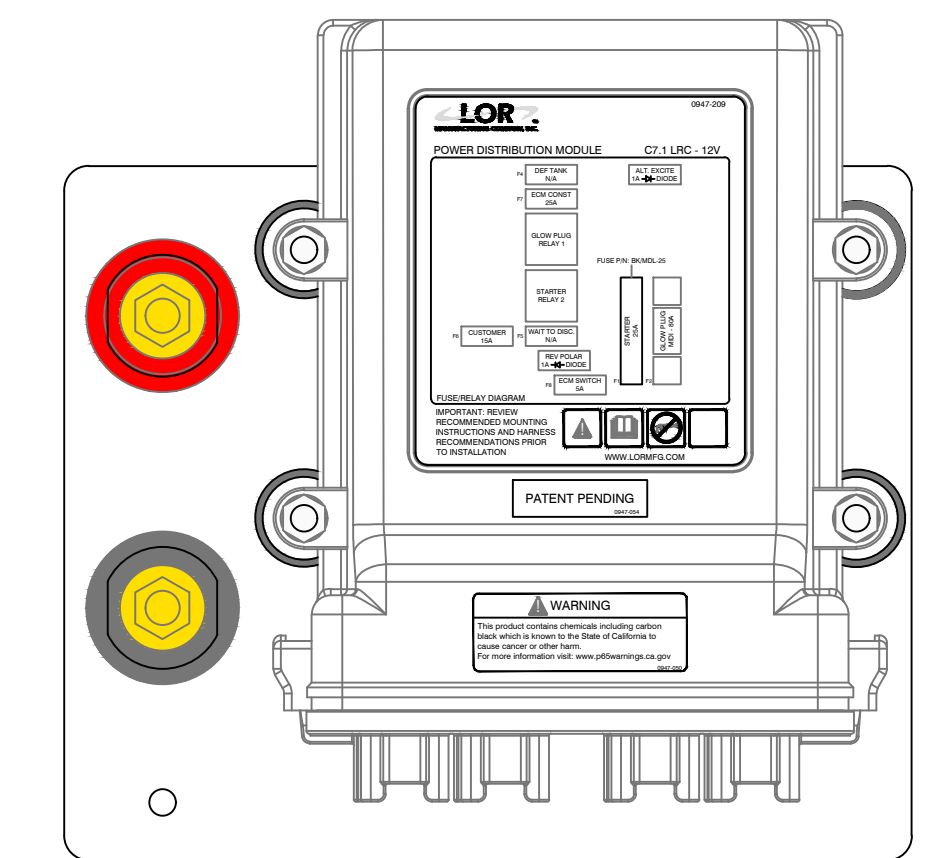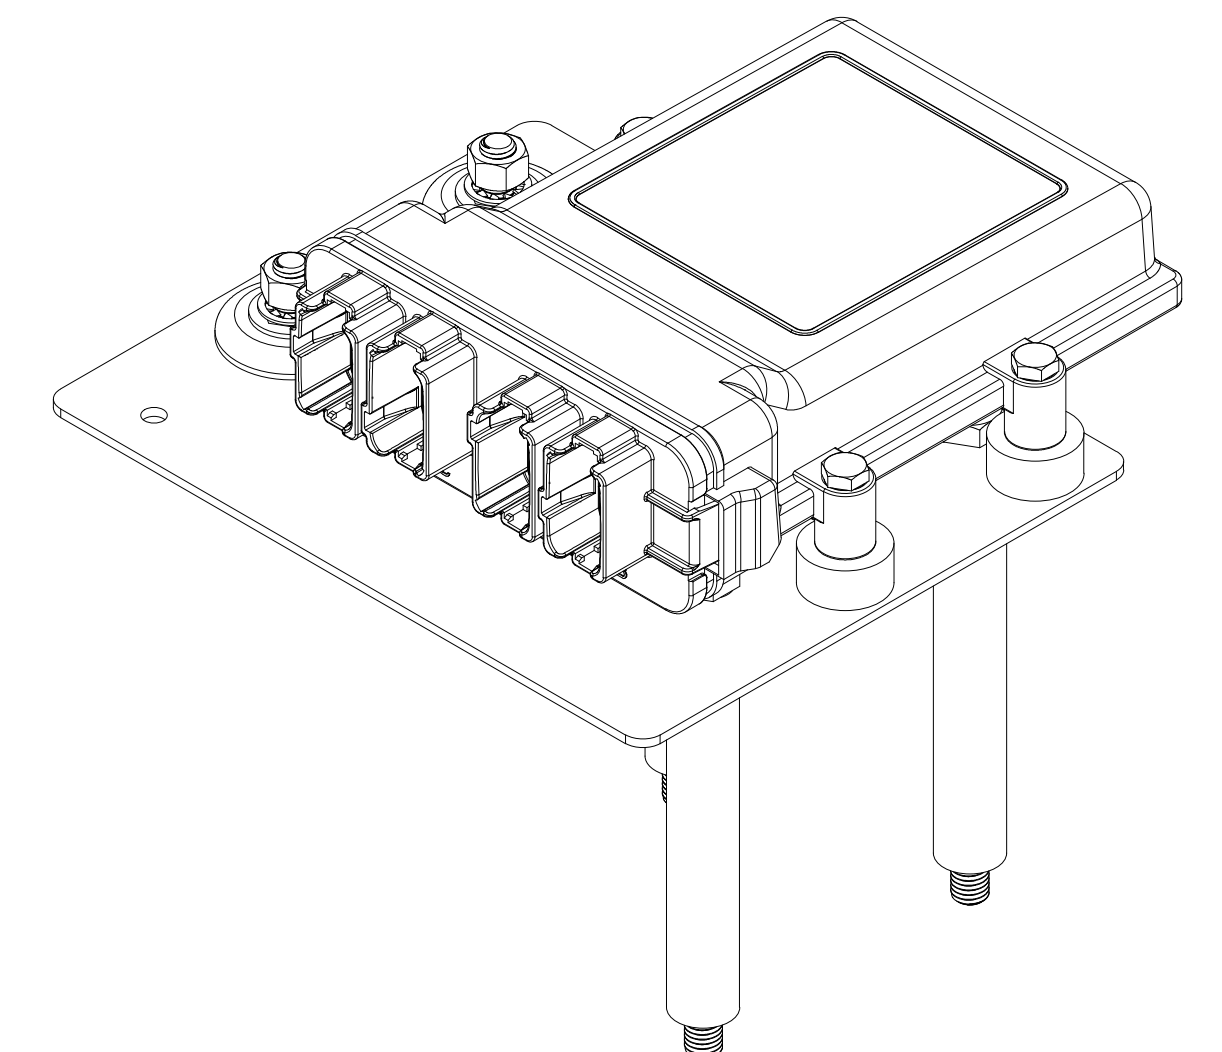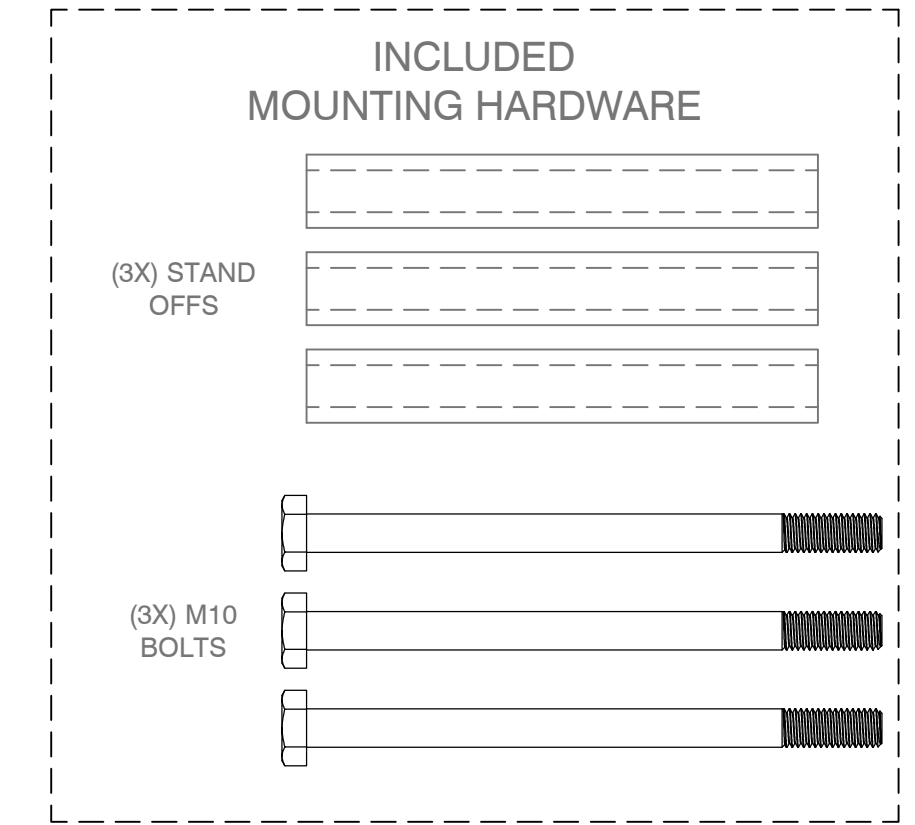

CUSTOMER CONNECTOR
HARNESS CONNECTORS

WATER IN FUEL CONNECTOR

#	DESCRIPTION	TERMINATION/CONNECTION POINT
1	WF SENSOR SIGNAL	TO #4 SOCKET CONNECTOR - #44
2	WF SENSOR SUPPLY (+8V)	TO #7 SPlice
3	SENSOR RETURN	TO SENSOR RETURN SPlice

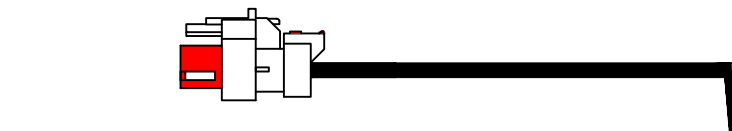

COOLANT LEVEL SENSOR

#	DESCRIPTION	TERMINATION/CONNECTION POINT
A	ANALOG SENSOR POWER (+8V)	TO #7 SPlice
B	ANALOG SENSOR RETURN	TO SENSOR RETURN SPlice
C	COOLANT LEVEL SENSOR	TO #4 SOCKET CONNECTOR - #47




GLOW PLUG
1/4" RING TERMINAL

#	DESCRIPTION	TERMINATION/CONNECTION POINT
1	GLOW PLUG	TO GLOW PLUG SPlice



3 PIN RESISTOR

#	DESCRIPTION	TERMINATION/CONNECTION POINT
A	CAN A (+)	SPliced TO YELLOW WIRE ON J1939 CABLE
B	CAN B (-)	SPliced TO GREEN WIRE ON J1939 CABLE

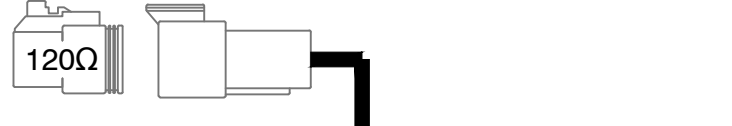

#	DESCRIPTION	TERMINATION/CONNECTION POINT
7	CONSTANT VOLTAGE TO ECM	TO CONSTANT VDC SPlice
8	CONSTANT VOLTAGE TO ECM	TO CONSTANT VDC SPlice
15	CONSTANT VOLTAGE TO ECM	TO CONSTANT VDC SPlice
16	CONSTANT VOLTAGE TO ECM	TO CONSTANT VDC SPlice
1	GROUND	TO BATTERY (-) SPlice
2	GROUND	TO BATTERY (-) SPlice
3	GROUND	TO BATTERY (-) SPlice
6	GROUND	TO BATTERY (-) SPlice
10	GROUND	TO BATTERY (-) SPlice
22	J1939 SHIELD	TO J1939 SHIELD SPlice
30	J1939 (+)	TO 12 SOCKET 'B' CONNECTOR - #1 (100 Ω 3PIN AL)
31	J1939 (-)	TO 12 SOCKET 'B' CONNECTOR - #9 (100 Ω 3PIN BL)
32	CAT DATA LINK (+)	TO 12 SOCKET 'B' CONNECTOR - #6
33	CAT DATA LINK (-)	TO 12 SOCKET 'B' CONNECTOR - #10
33	PWM SENSOR RETURN	TO SENSOR RETURN SPlice
35	SWITCH RETURN	TO SWITCH RETURN SPlice
36	INTERMEDIATE ENGINE SPEED SW	TO #6 POSITION INTERCONNECT - #6
40	SWITCHED VOLTAGE	TO SWITCHED VOLTAGE SPlice
41	PWM SENSOR SUPPLY (+8V)	TO #7 SPlice
41	WF SENSOR SIGNAL	TO WATER IN FUEL CONNECTOR - #1
47	COOLANT LEVEL SENSOR	TO #4 SOCKET CONNECTOR - C
48	REMOTE SHUTDOWN SWITCH	TO 12 SOCKET 'B' CONNECTOR - #5
49	PTO DISENGAGE (N/C)	TO #8 POSITION INTERCONNECT - #1
50	THROTTLE UP	TO #8 POSITION INTERCONNECT - #2
51	THROTTLE DOWN	TO #8 POSITION INTERCONNECT - #3
52	PTO ON/OFF	TO #8 POSITION INTERCONNECT - #4
53	PWM THROTTLE INPUT	TO #8 POSITION INTERCONNECT - #5
57	GLOW PLUG COIL (+)	TO 12 SOCKET 'B' CONNECTOR - #2
58	CHECK ENGINE LAMP	TO #8 POSITION INTERCONNECT - #1
60	STOP ENGINE LAMP	TO #8 POSITION INTERCONNECT - #2
61	PTO MODE LAMP	TO #8 POSITION INTERCONNECT - #3
62	LOW OIL PSI LAMP	TO #8 POSITION INTERCONNECT - #4
63	WAIT TO START LAMP	TO #8 POSITION INTERCONNECT - #5

ALT EXCITE
#10 RING TERMINAL

#	DESCRIPTION	TERMINATION/CONNECTION POINT
1	ALT EXCITE (D+)	TO 12 SOCKET 'D' CONNECTOR - #11



 
STARTER
1/4" RING TERMINAL

#	DESCRIPTION	TERMINATION/CONNECTION POINT
1	STARTER (+)	TO 12 SOCKET 'D' CONNECTOR - #8
1	STARTER (+)	TO 12 SOCKET 'D' CONNECTOR - #9




GROUND WIRES
BATTERY (-)

#	DESCRIPTION	TERMINATION/CONNECTION POINT
1	OND WIRES TO BATTERY (-) LUG	TO BATTERY (-) SPlice



BATTERY WIRES
BATTERY (+)

#	DESCRIPTION	TERMINATION/CONNECTION POINT
1	BATT WIRES TO BATTERY (+) LUG	TO BATTERY (+) SPlice

 

TO POWER DISTRIBUTION MODULE

6 POSITION INTERCONNECT

#	DESCRIPTION	TERMINATION/CONNECTION POINT
1	GLOW PLUG COIL (+)	TO SWITCHED VOLTAGE SPlice
2	GLOW PLUG COIL (-)	TO #4 SOCKET CONNECTOR - #57
3	CONSTANT VOLTAGE TO ECM	TO CONSTANT VDC SPlice
4	CONSTANT VOLTAGE TO ECM	TO CONSTANT VDC SPlice
5	REMOTE SHUTDOWN SWITCH	TO #4 SOCKET CONNECTOR - #48
6	J1939 (+)	TO #4 SOCKET CONNECTOR - #21 (100 Ω 3PIN BL)
6	J1939 (-)	TO #4 SOCKET CONNECTOR - #20 (100 Ω 3PIN AL)
8	SWITCH RETURN	TO SWITCH RETURN SPlice
8	CAT DATA LINK (+)	TO #4 SOCKET CONNECTOR - #20
8	CAT DATA LINK (-)	TO #4 SOCKET CONNECTOR - #24

8 POSITION INTERCONNECT

#	DESCRIPTION	TERMINATION/CONNECTION POINT
1	PTO DISENGAGE (N/C)	TO #4 SOCKET CONNECTOR - #49
2	THROTTLE UP	TO #4 SOCKET CONNECTOR - #50
3	THROTTLE DOWN	TO #4 SOCKET CONNECTOR - #51
4	PTO ON/OFF	TO #4 SOCKET CONNECTOR - #52
5	PWM THROTTLE INPUT	TO #4 SOCKET CONNECTOR - #53
6	SWITCH RETURN	TO SWITCH RETURN SPlice
7	PWM SENSOR SUPPLY (+8V)	TO #7 SPlice
8	PWM SENSOR RETURN	TO SENSOR RETURN SPlice

TO GLOW PLUG POST ON ENGINE

TO ALT EXCITE (D+) ON ENGINE

TO STARTER ON ENGINE

WIRE COLOR	GAUGE	DESCRIPTION	TERMINATION/CONNECTION POINT	CUT LENGTH
[A] RED	8 GA.	STARTER TO ALT BATTERY (+)	1/2" RING TERMINAL TO 5/16" RING TERMINAL	35 IN.
[B] BLACK	8 GA.	STARTER TO ALT BATTERY (-)	1/2" RING TERMINAL TO 5/16" RING TERMINAL	30 IN.
[C] BLACK	8 GA.	STARTER ENGINE BLOCK (-)	1/2" RING TERMINAL TO 3/8" RING TERMINAL	7 IN.

